

Heating Element Reversal Guide

1. Turn off the towel warmer and ensure that the power supply is disconnected.
2. Remove towel warmer from wall by loosening the four set screws located on the bottom of the brackets.
3. Turn the towel warmer upside down.
4. Remove the element using a 27mm wrench.
5. Turn towel warmer on a 45° angle so that any air bubble that may be inside come out.
6. Install new heating element, ensuring none of the liquid inside is lost.
7. Tighten, but not over tighten as this could break the seal.
8. Reinstall the towel warmer on the wall.
9. After heating the towel warmer for 2 hours, loosen the bleed valve located at the top back of the towel warmer. If there is no bleed valve, instead loosen the sealed plug on the top of the towel warmer using an 8mm Allen wrench. **Use caution** – You should hear air being released from the towel warmer. Retighten bleed valve or sealed plug. If using a torque wrench, torque it to 12-foot pounds.

If you have any questions at any point during the process, please call **1-877-757-8930** and a representative can walk you through it!

