


Volkano Summit 12" Towel Bar Installation Guide

Code: V63132, V63133, V63134, V63135, V63136

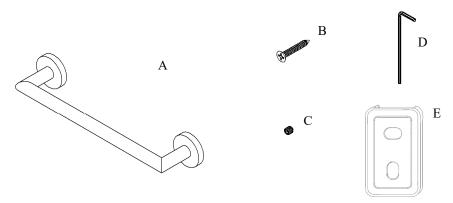



Parts Included	QTY
A - Towel Bar	1
B - Screw	4
C - Set Screw	2
D - Allen Key	1
E - Bracket	2

Model #	Description	Finish	Weight (lb)	WxHxD (mm)	WxHxD (Inches)	Metal Type
V63132	Summit 12" Towel Bar	Matte White	0.66	333 x 52 x 70	13.1 x 2 x 2.75	Brass
V63133	Summit 12" Towel Bar	Chrome	0.66	333 x 52 x 70	13.1 x 2 x 2.75	Brass
V63134	Summit 12" Towel Bar	Brushed Nickel	0.66	333 x 52 x 70	13.1 x 2 x 2.75	Brass
V63135	Summit 12" Towel Bar	Matte Black	0.66	333 x 52 x 70	13.1 x 2 x 2.75	Brass
V63136	Summit 12" Towel Bar	Polished Nickel	0.66	333 x 52 x 70	13.1 x 2 x 2.75	Brass

Warranty: 2 Years

Care & Maintenance: A periodic wash using warm water and a soft cloth will retain the high quality finish of your Volkano product for many years to come. ON NO ACCOUNT should any household bleaches, detergents, abrasive polishes, steel wool or other cleaning agents be used on this item.

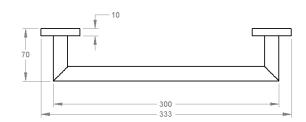





877-757-8930 www.icobath.com