


Volkano Summit Spare Toilet Paper Holder Installation Guide

Code: V63083, V63084, V63085, V63086, V63088, V63089

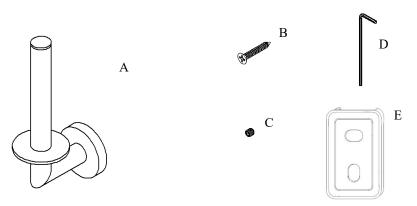


Parts Included	QTY
A - Spare Toilet Paper Holder	1
B - Screw	2
C - Set Screw	1
D - Allen Key	1
E - Bracket	1

Model #	Description	Finish	Weight (lb)	WxHxD (mm)	WxHxD (Inches)	Metal Type
V63083	Summit Spare Toilet Paper Holder	Chrome	0.46	52 x 176 x 87	2 x 6.9 x 3.4	Brass
V63084	Summit Spare Toilet Paper Holder	Brushed Nickel	0.46	52 x 176 x 87	2 x 6.9 x 3.4	Brass
V63085	Summit Spare Toilet Paper Holder	Matte Black	0.46	52 x 176 x 87	2 x 6.9 x 3.4	Brass
V63086	Summit Spare Toilet Paper Holder	Polished Nickel	0.46	52 x 176 x 87	2 x 6.9 x 3.4	Brass
V63088	Summit Spare Toilet Paper Holder	PVD Brushed Gold	0.46	52 x 176 x 87	2 x 6.9 x 3.4	Brass
V63089	Summit Spare Toilet Paper Holder	PVD Brushed Bronze	0.46	52 x 176 x 87	2 x 6.9 x 3.4	Brass

Warranty: 2 Years

Care & Maintenance: A periodic wash using warm water and a soft cloth will retain the high quality finish of your Volkano product for many years to come. ON NO ACCOUNT should any household bleaches, detergents, abrasive polishes, steel wool or other cleaning agents be used on this item.

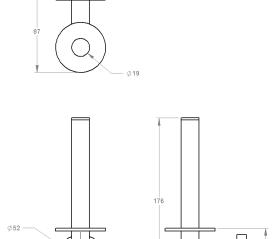

877-757-8930 www.icobath.com